



To download the new 8.05 Firmware:

1. Download the new 3.3.1 Communicator and both the 8.05 and 8.05S files (place the 8.05 and 8.05s) in one folder.
2. Run the Communicator and with the CPU powered ON and your laptop connected to the CPU.
3. Click on the "Firmware Update" button. (Do NOT click on the "Connect" button!)
4. A window will open asking you to select a file.
5. Click on the folder containing the 8.05 and 8.05s files and click on open.
6. A window will open prompting you to "Please connect and turn on or restart your Laser Interceptor device". Cycle the power switch off and on again. The upload will then begin automatically.
7. When the download is completed, a window will open indicating "upload complete". Click on "OK"
8. Once the upload completed window opens, disconnect the cable from your CPU and turn the LI Off and On again.
9. Turn the LI main power switch Off and On again.