

Main reasons and functions of using Laser blocker switch/pushbutton

If You use Laser jammer block switch Your Laser Interceptor device will be turned into Parking aid mode, and turn OFF Laser jammer function completely. You can return Laser jammer function through Laser Interceptor communicator after usage Laser block switch.

Enabling and usage of Jammer block feature

1. Run Laser Interceptor Communicator
2. **Hold letter „B“ and click connect button (this will open hidden options)**
3. Turn ON LI device (if it is turned OFF), or TURN OFF AND ON (if it is turned ON) to connect
4. **Click on Enable block jammer checkbox to enable function of jammer block switch/pushbutton and click upload button**
5. **Install jammer block switch/pushbutton in veichle and connect it to serial port of LI CPU**
6. If user issues some problem he needs to turn on **jammer block switch/pushbutton and restart LI Device(byturning it OFF and than back ON)** after that LI will work as Parking assistant until jamming function is activated with PC and LI communicator

Returning laser jammer function

1. Run Laser Interceptor Communicator
2. **Hold letter „B“ and click connect button (this will open hidden options)**
3. Turn ON LI device (if it is turned OFF), or TURN OFF AND ON (if it is turned ON) to connect
4. Click on **RESTORE JAMMMER** and click upload button
5. Your device will be working as laser jammer again

Turning OFF laser bock function

1. Run Laser Interceptor Communicator
2. **Hold letter „B“ and click connect button (this will open hidden options)**
3. Turn ON LI device (if it is turned OFF), or TURN OFF AND ON (if it is turned ON) to connect
4. Uncheck Enable Block jammer
5. Click UPLOAD BUTTON