



LASER INTERCEPTOR REMOTE EXTERNAL SPEAKER INSTALLATION INSTRUCTIONS

1. SEE PAGE 5 OF THE LI USER MANUAL TO SET THE SPEAKER JUMPER FROM INTERNAL TO EXTERNAL SETTING

DOWNLOADABLE MANUAL AVAILABLE AT:

<https://www.laser-interceptorusa.com/image/data/misc/manual.pdf>

2. REPLACE EXISTING POWER LOOM WITH SUPPLIED POWER LOOM

3. CONNECT 3.5 MM JACK ON SPEAKER CABLE TO THE 3.5 MM RECEPTACLE ON THE NEW POWER LOOM..